



CPU's, Sports Cars and Magnets

What do users of these things have in common? An insatiable demand for maximum performance!

DEXTER AT A GLANCE:

- > ISO: 9001:2008
- > AS9100C
- > Clean Room Class 10000 (ISO7)
- > Patented Magnetic Technology
- > Flexible Manufacturing

Computer chip manufacturers and auto manufacturers delight in the feeding frenzy that follows the announcement of a new, faster model. This "speed greed" makes premiuproducs the subject of feature review articles in industry specific media. A drop in the cost of magnet material, on a cost per unit of energy basis, has caused magnet users to join this melee, searching for the highest energy product available. More and more honest authors present the cost / performance equation in meaningful terms, suggesting that users examine their intended use before buying marginal increases in speed they cannot use. This applies to magnet-based systems also, where one must be aware of the parameters important to the function of the system.

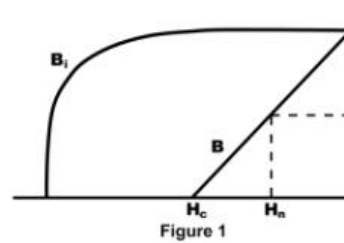


Figure 1

Energy product is a contraction of the term "maximum energy product", in mega gauss-oersteds (MGOe), and the term is very descriptive of the calculation. The calculation is based on the Bn and Hn coordinates of points on the magnet's normal operating curve, as shown in figure 1. The normal curve represents the external unit energy available from a magnet material, the energy available to the device the magnet is used

in. The normal curve is directly related to the intrinsic (internal) energy curve by the formula: $B_i = B_n + H_n$, and extends from a point on the vertical axis that represents the residual flux density B_r , where $H = 0$, to a point known as the coercive force H_c on the negative horizontal axis, where $B = 0$. The coercive force is related to the ability of a magnet material to resist demagnetization. The value of B_r is only slightly greater than H_c for most modern "straight line" high energy materials at room temperature, so the ratio of B / H , known as the recoil permeability, U_r , is just slightly greater than 1. So we can set it at 1 for the purposes of examining the energy product calculation with little error.

ABOUT DEXTER

Dexter Magnetic Technologies is the global leader in specification, design and fabrication of magnetic products and assemblies. Since its founding in 1951, solutions designed by Dexter have and continue to positively impact our world daily – from life-saving medical devices to intelligent optics.

As the essential magnetic system partner, our teams of engineers and support staff are dedicated to delivering innovative technological solutions and services through a powerful combination of engineering and manufacturing expertise.

To judge magnet parameter needs properly, one must prioritize system requirements. The key parameters include gap flux density and field uniformity under operating conditions, demagnetizing influences, and environmental factors. Generally, flux density, B_g , in the working gap of a device is of paramount importance and it can be shown by current sheet analysis that, for a given magnetic circuit, B_g is directly related to the residual flux density B_r of the magnet material. Magnetic circuit geometry also determines susceptibility to operational demagnetizing factors, and the demagnetizing forces are proportional to the work extracted from the system. Environmental factors influence the total flux available and the effects of demagnetizing factors. Energy product is a design factor only if several materials are found to meet all other design requirements. To understand this, let us review how energy product is calculated.

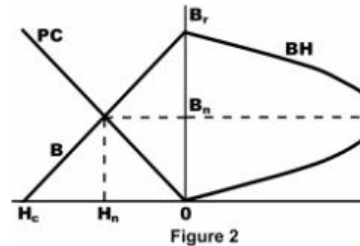


Figure 2

The maximum energy product for a material is where the product of $B_n \cdot H_n$ peaks, as illustrated in Figure 2. At either end of the normal curve one parameter is zero, so the energy product will be zero. Selecting a fictitious material with $U_r = 1.0$ and $B_r = 12,500$ G, at a B_n of 10,000 G, H_n will be 2,500 Oe and the energy product is 25,000,000 GOe. We divide by 1,000,000 and insert the prefix "mega", so we have an energy product of 25 MGOe at this point. At $B_n = 8,000$ G and $H_n = 4,500$ Oe the peak is 36 MGOe, and so on. At $B_n = 6,250$ G and $H_n = 6,250$ G the energy product will be found to maximize, in this case at 39 MGOe.



CPUs, Sports Cars and Magnets

What do users of these things have in common? An insatiable demand for maximum performance!

DEXTER AT A GLANCE:

- > ISO: 9001:2008
- > AS9100C
- > Clean Room Class 10000 (ISO7)
- > Patented Magnetic Technology
- > Flexible Manufacturing

ABOUT DEXTER

Dexter Magnetic Technologies is the global leader in specification, design and fabrication of magnetic products and assemblies. Since its founding in 1951, solutions designed by Dexter have and continue to positively impact our world daily – from life-saving medical devices to intelligent optics.

As the essential magnetic system partner, our teams of engineers and support staff are dedicated to delivering innovative technological solutions and services through a powerful combination of engineering and manufacturing expertise.

Extending from this calculation, it is easy to see that, if a pure iron permanent magnet could be made with a B_r of 20,000 G, the energy product would be 100 MGOe. For now, B_n seems to be asymptotic at 16,000 G because the ferrous element must be diluted by other elements to improve coercivity, so beware of promises of energy products in excess of 60 MGOe.

The maximum energy product for all high energy materials will be found to peak where the value of B_n is just slightly greater than that for H_n , and this defines another important operating characteristic, the optimum load line slope, or permeance coefficient (PC) – again, see Figure 2.

The operational PC is defined by the geometry of the magnetic circuit, and the magnet PC is defined by the geometry of the magnet prior to placing it into the circuit. The optimum use of a volume of magnet material would result if the geometry of the magnet volume resulted in the PC required to produce the material's maximum energy product, and when inserted in the circuit produced the flux density and uniformity, and/or total flux required by the system. As a rule of thumb, the PC of the magnetic circuit will typically be close to the ratio of magnet length to working gap length. The PC for maximum energy product using modern magnet materials is close to 1.0, where $B_n = 6,250$ G for our fictitious material; this results from a magnet geometry with a length to (effective) diameter ratio of around 0.5. Adding to the magnetic length dimension of the magnet will improve resistance to demagnetization, so let us increase the length of the magnet by 30 % so the l/d ratio is 0.65 and the PC = 1.3, where $B_n = 7,065$ G. If flux density in the working gap of the system is 1,000 G, then the new gap flux density would be $1,000 / 6,250 \cdot 7,065$ or 1,130 G. Note that the higher gap flux density could be achieved by increasing the area of the magnet, but this would reduce the system's ability to resist demagnetizing forces.

For the same set of assumptions ($U_r = 1.0$), the B_r of a 50 MGOe magnet would be 14,142 G. If one chose to replace the original 39 MGOe magnet with a 50 MGOe magnet the gap flux density would rise to $14,142 / 12,500 \cdot 1,000 = 1,131$ G, or we could reduce the diameter by 10 % to achieve a B_g of 1,000 G with the new 50 MGOe magnet.

In summary, for the example given, a 20% increase in energy product resulted in a 13% increase in gap flux density without improving the system's ability to resist demagnetizing forces. The same increase was achieved by increasing the original magnet length by 30%, and in so doing the system's resistance to demagnetization was improved. There are many design factors that influence the choice of a magnet material, but energy product should not be at the top of the list

Authors:

Richard Stelter
Director of Technical Development

Gareth Hatch
Director of Technology